




# Curb Inlet Filter

## Installation Instructions *Out of Sight, Peace of Mind*

[Taurus Curb Inlet Filter](#) Instructions are provided as a guideline for installation in most applications. Please ask your Product Specialist for technical assistance on custom designs, layouts, or applications.

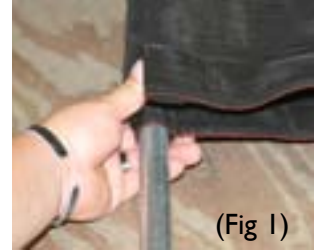


Step 1: Locate and connect the support rods (4) and couplers (2) as shown above.

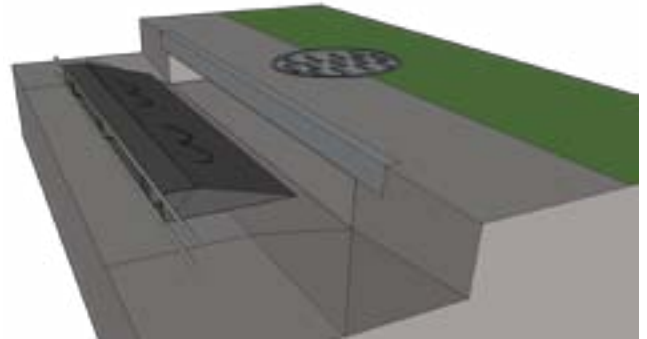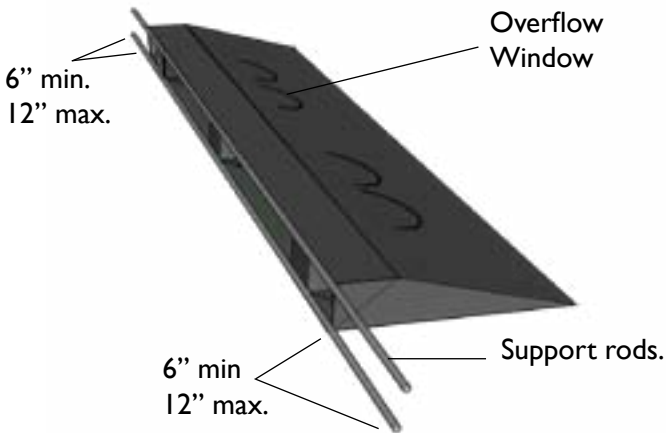

Step 2: Unfold and lay out Curb Inlet Filter with foam inserts facing you and overflow windows oriented on top. Carefully thread support rods through top and bottom channel pockets (Fig 1).

Step 3: Line up support rods to curb opening and carefully kick foam wedges into drain opening.

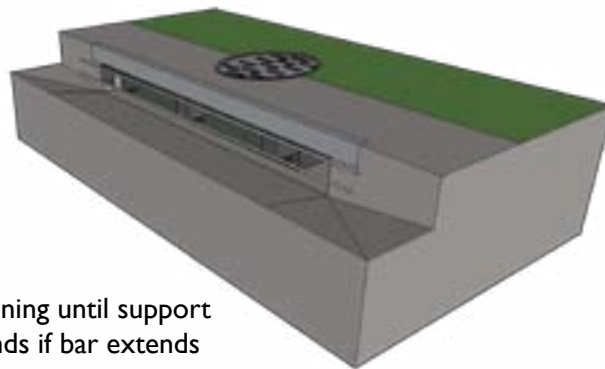

Step 4: Kick wedges into opening until support rebar is flush to curb. Cap ends if bar extends beyond curb (Fig 3).